

OPERATING & SAFETY GUIDE

6 SLOT TOASTER

The logo for Blue Sky Event Hire, featuring the words "BLUE" and "SKY" in a bold, white, sans-serif font stacked vertically inside a blue rounded rectangle with a white border.

GENERAL SAFETY

Contact Blue Sky Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs.

Never operate electrical switches with wet hands.

Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Blue Sky Event Hire. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

OPERATING GUIDE

Suitable for indoor use only.

Position the unit where it is to be used and ensure that it is level. The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked. The toaster has one adjustable rear foot which can be hand turned to compensate for uneven surfaces.

Connect the appliance to the mains power supply.

Select the number of slices to be toasted on the slot selector switch. Lift the round black Ejector Knob to the UP position.

Starting from left to right, insert bread into all slots brought into action by the selector switch.

OPERATING GUIDE cont'd

Turn the Time Switch Knob clockwise to the required number on the dial:

1.5 = Lightly browned toast

2.0 = Medium toast

2.5 = Well done toast

If using brown bread, slightly increase time setting.

As the time switch is rotated the automatic timing will start and the red neon light will illuminate.

The timer will click off from 0.5 to 0 position with a clicking sound, the neon light and heating elements will switch off automatically.

The timer can be rotated off at any time during the toasting by manually rotating the timer knob to the 0 position.

The toast will pop up but will keep warm inside the toaster. Press the down the round ejector knob and the toast will pop up ready for serving.

To toast frozen bread, set timer to defrost symbol. Let the timer run to 0 position, wait 20 seconds then continue to toast as normal.

Caution – Heating up a slot that has not been loaded with bread may damage the elements and cause uneven toasting. Do not use the toaster if the crumb tray or base plate are missing or incorrectly fitted.

The toaster has adjustable wire slots that will adjust to thicker bread.

CLEANING

Disconnect from the mains supply before cleaning and allow the toaster to cool.

Do not immerse the appliance in water or clean with a water jet. Remove the crumb tray and clean daily.

Clean any crumbs from the elements (using only a soft brush), the toaster turned upside down and shaken out.

Never insert a fork or other sharp instrument to remove torn pieces of bread as the elements may be damaged.

Use a damp cloth to wipe off the outside surface of the toaster. Do not use bleach or any corrosive detergent as they will damage the surface of the unit.