

# OPERATING & SAFETY GUIDE

## SOUP KETTLE



### GENERAL SAFETY

Contact Blue Sky Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide. This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs. Never operate electrical switches with wet hands. Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply. If the equipment fails to operate or the power cable or plug becomes damaged, contact Blue Sky Event Hire. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard. Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

Ensure the water boiler and power socket are switched off before plugging in.

### OPERATING GUIDE

Suitable for indoor use only.

Position the unit where it is to be used and ensure that it is level.

Ensure the surface is strong enough to take the weight when full, the unit is heavy when full.

The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked.

Connect the appliance to the mains power supply.

Fill the outer container with approximately 600ml of water.  
**Note: Never operate the appliance without water in the outer container.**

Carefully place the inner container into the appliance.  
**Note: The inner container must NOT float, even when empty. If the container floats, reduce the amount of water in the outer container.**

### OPERATING GUIDE cont'd

Fill the inner container with soup and close the lid.

**Note: If necessary, remove any excess water from the outer container.**

Set the temperature control, the temperature ranges from 1 (lowest) to 12 (highest). The power light will come on and the kettle will begin to heat up.

Stir regularly to achieve quicker heat up times.

At full power, a full kettle can take up to 90 minutes to heat through from cold.

When the kettle has reached temperature the Power light will switch off. Reduce the temperature to maintain heat levels. To maintain temperature, we recommend the lowest setting possible.

Use a suitable implement to remove the contents of the kettle. DO NOT TIP THE KETTLE TO REMOVE THE CONTENTS.

To turn the appliance Off, set the temperature control to '0'

**Warning: Never move or carry the appliance when it is switched on or contains hot liquid.**

### CLEANING

Disconnect from the mains supply before cleaning and allow the kettle to cool.

Do not immerse the appliance in water or clean with jet/power washers.

Clean any spilt food on the appliance immediately.

Wash out the kettle using clean water and a soft cloth.

The inner container and lid are machine washable.

Do not use sharp objects, metal scrapers, wire brushes or wire wool pads as they can scratch the steel.

Do not use bleach or any corrosive detergent as they will damage the surface of the unit.

Rinse thoroughly and dry thoroughly after cleaning.