

OPERATING & SAFETY GUIDE

HAND WASHING STATION

The logo for Blue Sky, featuring the words "BLUE" and "SKY" in a bold, white, sans-serif font, stacked vertically inside a blue rounded rectangle with a white border.

GENERAL SAFETY

Contact Blue Sky Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the work area. Ensure the floor of the work area is free from trip hazards and non-slip. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs. Never operate electrical switches with wet hands.

Always switch off and unplug the equipment from the power supply before moving or cleaning.

Check the equipment before use, if it shows signs of damage request a replacement.

ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Blue Sky Event Hire. Do not try to repair it yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.

Ensure the water boiler and power socket are switched off before plugging in.

OPERATING GUIDE

Position the unit where it is to be used and ensure that it is level.

Ensure the surface is strong enough to take the weight when full, the unit is heavy when full.

The unit should be positioned to give easy access to the user yet sufficiently out of the way to reduce the risk of it being touched or knocked accidentally.

Remove soap dish to gain access to watertank. Fill with water to maximum water level tab.

Ensure waste bucket is in position and the waste pipe is placed inside the bucket.

OPERATING GUIDE cont'd

Plug into a suitable 13amp protected supply.

Ensure switch is in the ON position and the red neon is illuminated.

Allow 20 minutes for the water to reach temperature before use. To fill the basin with water use the foot pump at the front of the machine.

Unit is protected from overheating by a control stat. If the tank has an insufficient amount of water in it, a pressure switch will cut electricity supply to the element preventing boiling dry, and damaging the element.

Before moving unit to a new location, make sure the water tank is emptied by tap located at the bottom of the tank.

Please note the waste bucket should be emptied regularly.

AFTER USE

Switch off and unplug from the power supply. Empty water and waste containers as previously instructed.